


SERVICE INDICATORS & WARNING LIGHTS


1990-92 MAINTENANCE

Mada Service Indicator & Warning Lights


SERVICE INDICATORS AND WARNING LIGHTS

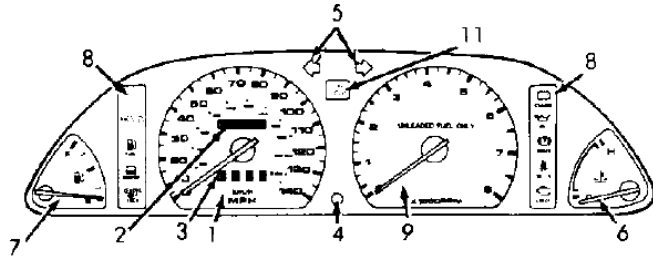

1990 DASH WITH TACHOMETER

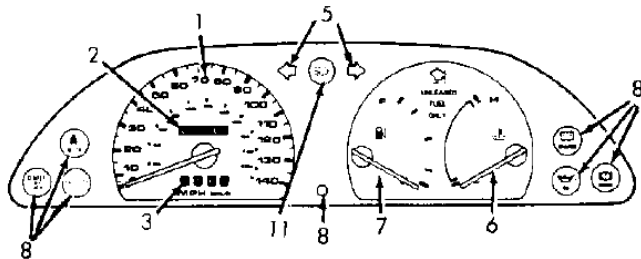

1990 DASH WITHOUT TACHOMETER

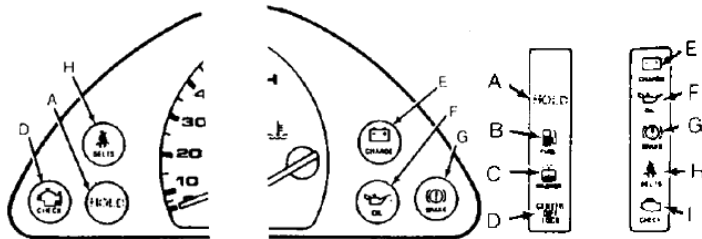

- | | |
|---------------------------------------------------|------------------------------------------------|
| 1. Speedometer | C. Windshield Washer Reservoir Warning Light |
| 2. Odometer | D. Differential Lock Indicator (4WD Model) |
| 3. Trip Odometer | E. Charging System Warning Light |
| 4. Trip Meter Reset | F. Oil Pressure Warning Light |
| 5. Turn Signal/Hazard Warning Flasher Indicator | G. Brake System Warning Light |
| 6. Engine Temperature Gauge | H. Seat Belt Warning Light |
| 7. Fuel Gauge | I. Check Engine Electrics Warning Light |
| 8. Warning Indicator Lights | J. Stop Light Malfunction Warning Light |
| A. Automatic Transmission Hold Mode (if Equipped) | K. Rear Window Defogger Indicator |
| B. Fuel Warning Light | 9. Tachometer |
| | 10. Fuel Gauge Scale Change Knob (if Equipped) |
| | 11. High Beam Indicator |

BRAKE SYSTEM WARNING LIGHT

BRAKE light comes on with parking brake. If light remains on with parking brake off, brake fluid level is low.

SEAT BELT WARNING

Light and beeper will go on for about 6 seconds, or until driver's belt is locked, when ignition is turned on.

CHARGING SYSTEM WARNING LIGHT

CHARGE light indicates a malfunction of either the alternator or the electrical charging system.

ENGINE OIL PRESSURE WARNING LIGHT

Indicates low oil pressure. If light comes on during vehicle operation, check engine oil level and add fluid as necessary. If light remains on, immediate service is required. DO NOT run engine if oil pressure is low. Extensive engine damage could result.

MALFUNCTION INDICATOR LIGHT

CHECK light warns of a problem in the engine electrical system.

HEADLIGHT HIGH BEAM INDICATOR

Indicates headlight high beam is on.

HAZARD WARNING LIGHT

Light flashes with hazard warning lights.

KEY REMINDER WARNING

A beeper sounds if the key is left in the ignition and a door is opened.

WASHER FLUID WARNING

Indicates low fluid level in windshield washer.

HOLD LIGHT (AUTOMATIC TRANSMISSION)

Light comes on when the HOLD mode is selected. This stops automatic speed change operation. If HOLD light flashes, the transmission has an electrical problem. Continued operation under these conditions could cause transmission damage.

TURBOCHARGER INDICATOR (IF EQUIPPED)

Light indicates that turbocharger system is operating. If turbocharger pressure is excessive, indicator flashes on and off in a regular pattern and a buzzer also sounds. DO NOT drive vehicle under these conditions.

IMPORTANT ENGINE OVERHEAT INFORMATION



When you see this light, you should stop your car in a safe place away from fire hazards, such as dry leaves. You must then get it to an authorised dealer asap. Should you need to drive to a garage to get it seen to, try not to drive far, drive gently and leave the car to cool down for approximately 10 minutes before trying to work on it.